

# Meaningful Innovation.

**WEEE Number: 80133970** 

# **INSTRUCTION MANUAL**

INFRARED MOTION SENSOR







IP65
RATING

#### **TECHNICAL DATA**

MODEL	VT-80300
SKU	23161
INPUT POWER	AC: 220-240V, 50/60 Hz
RATED LOAD	Max. 1200W 300W û+LED
TIME DELAY	Min. 10sec ±3sec Max. 15min ±2min
DETECTION RANGE	180°
DETECTION DISTANCE	12m max (<24°C)
DETECTION MOVING SPEED	0.6-1.5m/s
<u> </u>	<u> </u>

-20°C to +40°C
<93%RH
Approx, 0.5W
<3-2000 LUX (Adjustable)
1.8-2.5m
approx 0.9w
0.6-1.5 m/s
119.5x80x51.5 mm

# **INTRODUCTION & WARRANTY**

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 5 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product.



# MULTI-LANGUAGE MANUAL QR CODE

Please scan the QR code to access the manual in multiple languages.

#### **WARNING**

- 1. Please make sure to turn off the power before starting the installation.
- 2. Installation must be performed by a qualified electrician.




This marking indicates that this product should not be disposed of with other household wastes.




Caution, risk of electric shock.

### **FUNCTION**

- 1. Can identify day and night: The consumer can adjust working state in different ambient light. It can work in the daytime and at night when it is adjusted on the "sun" position (max). It can work in the ambient light less than 3LUX when it is adjusted on the "3" position (min). As for the adjustment pattern, please refer to the testing pattern.
- 2. Time-Delay is added continually: When it receives the second induction signals within the first induction, it will restart to time from the moment.

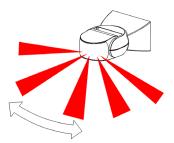



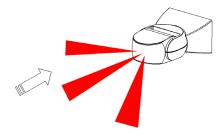


Good Sensitivity


Poor Sensitivity

#### INSTALLATION ADVICE


As the detector responds to changes in temperature, avoid the following situations

- Avoid pointing the detector towards objects with highly reflective surfaces, such as mirrors etc.
- Avoid mounting the detector near heat sources, such as heating vents, air conditioning units, light etc.
- Avoid pointing the detector towards objects that may move in the wind, such as curtains, tall plants etc.

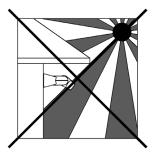

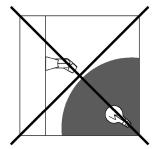



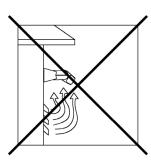

#### CONNECTION

- Loosen the screw on the bottom and unload the bottom (refer to the figure).
- Pass the power wire through the hole with gasket in the bottom. Connect the power wire into connection-wire column according to the connection-wire diagram.
- Fix the bottom with inflated screw on the selected position (refer to the figure2).
- Install back the sensor on the buttom, tighten the screw and then test it.


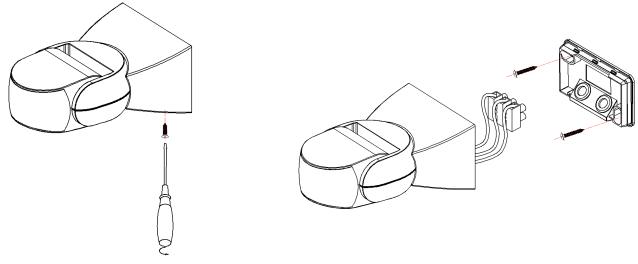



Figure 1 Figure 2

## **CONNECTION-WIRE DIAGRAM**

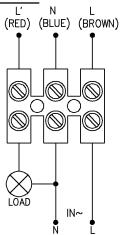


#### **TEST**

- Turn the LUX knob clockwise on the maximum (sun). Turn the TIME knob anti-clockwise on the minimum (10s).
- Switch on the power; the sensor and its connected lamp will have no signal at the beginning. After Warm-up 30sec, the sensor can start work. If the sensor receives the induction signal, the lamp will turn on. While there is no another induction signal any more, the load should stop working within 10sec±3sec and the lamp would turn off.
- Turn LUX knob anti-clockwise on the minimum (3). If the ambient light is more than 3LUX, the sensor would not work and the lamp stop working too. If the ambient light is less than 3LUX (darkness), the sensor would work. Under no induction signal condition, the sensor should stop working within 10sec±3sec.

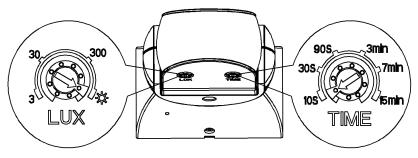


Note: when testing in daylight, please turn LUX knob to 🌣 (SUN) position, otherwise the sensor lamp could not work!

#### SENSOR INFORMATION

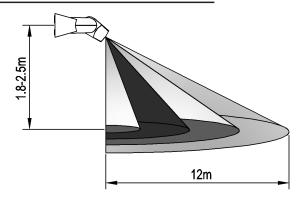



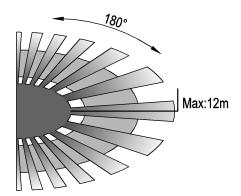

Detection Distance: Max.12m

## **SOME PROBLEM AND SOLVED WAY**

#### The load does not work:

- a. Please check if the connection of power source and load is correct.
- b. Please check if the load is good.
- c. Please check if the settings of working light correspond to ambient light.

#### The sensitivity is poor:

- a. Please check if there is any hindrance in front of the detector to affect it to receive the signals.
- b. Please check if the ambient temperature is too high.
- c. Please check if the induction signal source is in the detection field.
- d. Please check if the installation height corresponds to the height required in the instruction.
- e. Please check if the moving orientation is correct.

#### The sensor can not shut off the load automatically:

- a. Please check if there is continual signal in the detection field.
- b. Please check if the time delay is set to the maximum position
- c. Please check if the power corresponds to the instruction.









